



Maintenance | After use | Omnilock Nut OL01 | 30050

Page: 1 of 2



Prerequisites before repair;

- Only Holmatro trained and certified technicians are allowed to perform this task.
- Wear full protective gear during maintenance.
- Always act according to the instructions supplied with each tool.

Necessary special equipment;

1.



Inspect;

- Check the general condition of the device.
- Check the housing for cracks, tears, scratches.
- Check if the device has any traces of leakage (grease).

2.



Inspect;

- The status of the finger protection (1).
- Check the status of the snap ring (2).
- Do not use the device if the protections fail.

3.



Inspect;

- Extend the strut (1).
- Check if the nut can be easily moved alongside the spindle (2).

4.

**Inspect;**

- The condition and presence of the springs in the ring (1).

5.

**Inspect;**

- The slide mechanism that can influence the functioning.
- Small defects can be reworked with a file.

6.

**Inspect;**

- Ensure the drive unit slides easily on the nut (1).
- Unlock the drive mechanism (2).
- Ensure the drive unit slides easily off the nut (3).