



Maintenance | After use | Omnilock Drive OL02 | 30052

Page: 1 of 2



Prerequisites before repair;

- Only Holmatro trained and certified technicians are allowed to perform this task.
- Wear full protective gear during maintenance.
- Always act according to the instructions supplied with each tool.

Necessary special equipment;

1.



Inspect;

- Check the general condition of the device.
- Check the housing for cracks, tears, scratches.
- Check if the device has any traces of leakage (grease).


2.



Inspect;

- Inspect the presence and function of the bumper (1).

3.

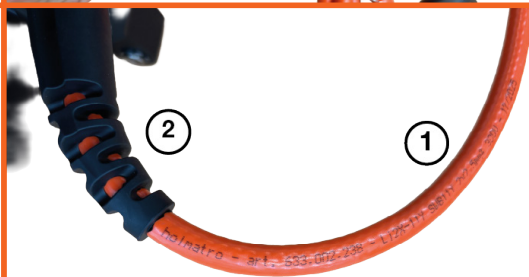

Inspect;

- Check the entire length of the power cable (1) for damages that can influence the performance and safety of the device.
- Check the condition of the bend restrictor (2).

4.

**Inspect;**

- The presence of the dustcap and condition of the connector.

5.

**Inspect;**

- The slide mechanism that can influence the functioning.
- Small defects can be reworked with a file.

6.

**Inspect;**

- Ensure the drive unit slides easily on the nut (1).
- Unlock the drive mechanism (2).
- Ensure the drive unit slides easily off the nut (3).